
## **/ISRock** Jumpers and headers setting guide


## **IMB-146**



1 : ATX 12V Power Connector

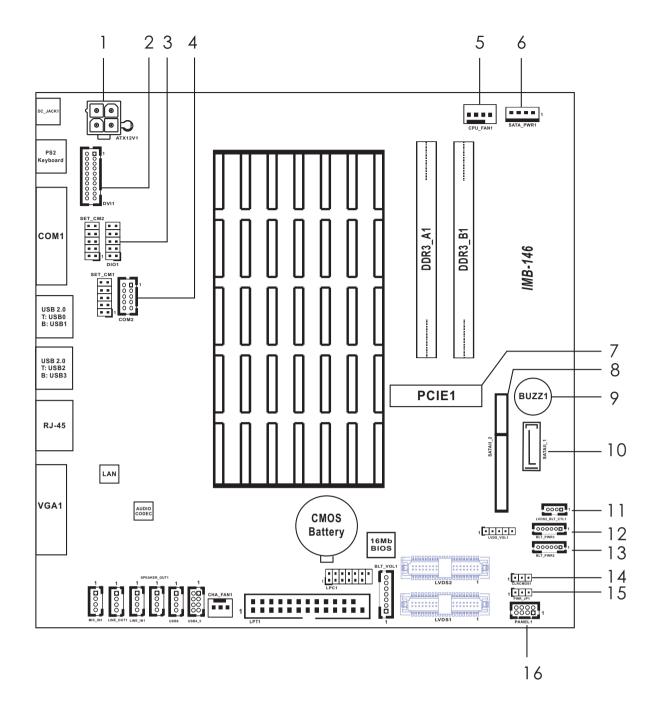


2 : DVI Connector

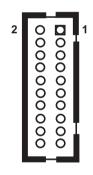

PIN	Signal Name	PIN	Signal Name
2	NC	1	GND
4	GND	3	TMDS CLK-
6	TMDS DATA1+	5	TMDS CLK+
8	TMDS DATA1-	7	GND
10	GND	9	GND
12	DDC DATA	11	TMDS DATA0+
14	DDC CLK	13	TMDS DATA0-
16	GND	15	GND
18	TMDS DATA2+	17	HOT PLUG
20	TMDS DATA2-	19	+5V

3 : Digital I/O Header GPIO from Super I/O

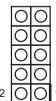

PIN	Signal Name	PIN	Signal Name
10	GND	9	+5V
8	GP3	7	GP7
6	GP2	5	GP6
4	GP1	3	GP5
2	GP0	1	GP4

Super I/O: Nuvoton NCT6776D

4 : COM Port Header



PIN	Signal Name	PIN	Signal Name
2	NC	1	GND
4	COM PWR/RI	3	DTR
6	CTS	5	TXD
8	RTS	7	RXD
10	DSR	9	COM PWR/DCD

7: mini PCIE Connector (Half size only)

8,10 : SATA2 Connectors

9 : Buzzer

11: LVDS2 Backlight Control Connector



PIN	Signal Name		
1 GND			
2 BL DW			
3 BL UP			
4 LVDS2 EN			

**Backlight Power Connectors** 12: BLT\_PWR2 (for LVDS1) 13: BLT\_PWR3 (for LVDS2)




PIN	Signal Name		
1	+12V		
2	+12V		
3	BL EN		
4	BL CTL		
5	GND		
6	GND		

14 : Clear CMOS Header 1-2: Normal (Default)

2-3: Clear CMOS

15 : DWD ID Hooder			
15 : PWR_JP Header 1-2: AT Mode		0	(
2-3: ATX Mode (Default)	1	2	Section 1

16: System Panel Header

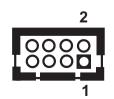


PIN	Signal Name	PIN	Signal Name
1	GND	2	RESET#
3	GND	4	PWRBTN#
5	HDLED+	6	HDLED-
7	PLED+	8	SUS LED

5: 4-Pin CPU FAN Connector (+12V)

6 : SATA Power Output Connector



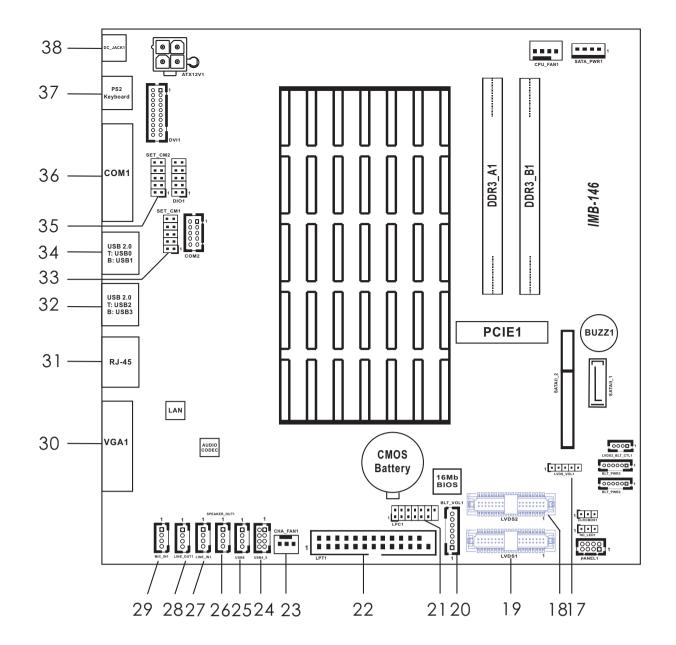

17: LVDS Power Jumper


**LVDS Panel Connectors** 

18: LVDS2

100000

PIN	Signal Name
1	+3V
2	LVDS VDD
3	+5V
4	LVDS VDD
5	+12V


2 39 1

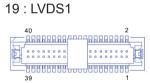

PIN	Signal Name	PIN	Signal Name
39	GND	40	GND
37	NC	38	NC
35	NC	36	NC
33	NC	34	NC
31	NC	32	NC
29	NC	30	NC
27	GND	28	GND
25	LVDS2 D3(-)	26	LVDS2 D3(+)
23	LVDS2 CLK(-)	24	LVDS2 CLK(+)
21	LVDS2 D2(-)	22	LVDS2 D2(+)
19	LVDS2 D1(-)	20	LVDS2 D1(+)
17	LVDS2 D0(-)	18	LVDS2 D0(+)
15	B/L ENABLE	16	GND
13	B/L ADJUST	14	LVDS PWR EN
11	NC	12	NC
9	LVDS PWR	10	LVDS PWR
7	VCC 3.3V	8	GND
5	+12V	6	GND
3	+12V	4	+12V
1	+12V	2	+12V


PI	IN	Signal Name	PIN	Signal Name
3	9	GND	40	GND
3	7	LVDS1 D3(-)	38	LVDS1 D3(+)
3	5	LVDS1 CLK(-)	36	LVDS1 CLK(+)
3	3	LVDS1 D2(-)	34	LVDS1 D2(+)
3	1	LVDS1 D1(-)	32	LVDS1 D1(+)
2	9	LVDS1 D0(-)	30	LVDS1 D0(+)
2	7	GND	28	GND
2	5	LVDS1 D3(-)	26	LVDS1 D3(+)
2	3	LVDS1 CLK(-)	24	LVDS1 CLK(+)
2	1	LVDS1 D2(-)	22	LVDS1 D2(+)
1	9	LVDS1 D1(-)	20	LVDS1 D1(+)
1	7	LVDS1 D0(-)	18	LVDS1 D0(+)
1	5	B/L ENABLE	16	GND
1	3	B/L ADJUST	14	LVDS PWR EN
1	1	DDC CLK	12	DDC DATA
	9	LVDS PWR	10	LVDS PWR
] [7	7	VCC 3.3V	8	GND
	5	+12V	6	GND
] [3	3	+12V	4	+12V
] [1	1	+12V	2	+12V

20 : Backlight & Amp Volume Control Header

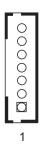


PIN	Signal Name
1	PWRBTN
2	VOL UP
3	VOL DW
4	BL UP
5	BL DW
6	GND
7	PWR LED

21: LPC Debug Header

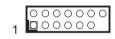

PIN	Signal Name	PIN	Signal Name
14	+3V	13	NC
12	+3V	11	+3V
10	GND	9	GND
8	LAD3	7	LAD2
6	LAD1	5	LAD0
4	LFRAME#	3	RESET#
2	GND	1	CLK

22: Printer Port Header

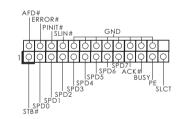

23: 3-Pin Chassis FAN Connector (+12V)

Internal USB Connectors 24: USB Port 4,5



26: Speaker-Out Connector



27: Line-In Connector



28 : Line-Out Connector



29: Mic-In Connector



30: VGA Port

31 : RJ-45 LAN Port

32 : USB 2.0 Ports (USB23)

**COM PWR Setting Jumpers** 

33: SET\_CM1

35 : SET\_CM2



PIN	Signal Name	PIN	Signal Nam
10	RRI#	9	DDCD#
8	P9	7	P1
6	+5VIO	5	+5VIO
4	P9	3	P1
2	+12VIO	1	+12VIO

34: USB 2.0 Ports (USB01)

36 : Serial Port: COM1

37: PS/2 Keyboard/Mouse Combo

38: +12V DC-In Jack